CONNECT TANK TRUCK BRASS 252



Brass tank truck coupling

Application

- silo, silo vehicle/ silo truck, tanker/ tank truck: silo charging, silo discharging
- for conveying of dry media and liquids

Properties

- according to EN 14420 -6
- Not to be used for explosive fluides group 1 and not according to pressure equipment directive
- REACH according to --> Technology / Technical Information / REACH

Design

material: brass

	Size	Weight	Suitable for Hose I.D.	Order No.	
	(mm)	(kg/pcs)	(mm)		
	(1111)	(kg/pcs)	(1111)		
	1) hose adapter with outer thread, corrugated nozzle for band clamp fitting; suitable to CONNECT 229 CLAMP ASSEMBLY				
	50	0,33	50	252-0050-8813	
	80	0,85	75	252-0075-8813	
	100	2,04	100	252-0100-8813	
	2) hose adapter with outer thread, smooth nozzle and locking ring for clamp shell band fitting; suitable to CONNECT 231 SAFETY CLAMP ASSEMBLY				
	50	0,34	50	252-0050-8823	
	80	0,83	75	252-0075-8823	
	100	1,63	100	252-0100-8823	
_					
	3) Type FC with inner thread ("coupling female/ piston ring / crown piece"), incl. clamping ring with lever				
	50	0,67	-	252-0050-8297	
	80	1,17	-	252-0075-8297	
	100	1,72	-	252-0100-8297	
4) Type MC with inner thread ("coupling male / curved piece")					
	50	0,31	-	252-0050-8497	
	80	0,75	-	252-0075-8497	
	100	1,13	-	252-0100-8497	
	replacement lip-seal for type MC, NBR black				
	50	0,09	-	252-0050-8068	
	80	0,02	-	252-0075-8068	
	100	0,02	-	252-0100-8068	
	replacement thread-seal, PU black				
	50	0.003	au-seal, FU DIACK	252-0050-8078	
	JC	0,003	-	202-0000-0070	

Overpressure and underpressure are recommended threshold operating values, products can be subjected to higher loads upon request. The bending radius is measured through the inside of the hose arch. The right to make technical modifications is reserved. All values determined at 20°C and are approx. data. Additional information at www.norres.com/en/technology/

0,005

0,009

Overpressure and underpressure are recommended threshold operating values, products can be subjected to higher loads upon request. The bending radius is measured through the inside of the hose arch. The right to make technical modifications is reserved. All values determined at 20 °C and are approx. data. Additional information at www.norres.com/en/technology/

80

100

20200511

252-0075-8078

252-0100-8078

CONNECT TANK TRUCK BRASS 252

Accessories



CLAMP 216



CLAMP 212



CLAMP 211



CONNECT SAFETY CLAMP ASSEMBLY 231



CONNECT 230

Overpressure and underpressure are recommended threshold operating values, products can be subjected to higher loads upon request. The bending radius is measured through the inside of the hose arch. The right to make technical modifications is reserved. All values determined at 20°C and are approx. data. Additional information at www.norres.com/en/technology/

20200511